

Revision History

Ver 0.39

- (1)Add one page for describing the speaker configuration of ALC880 and CMI9880.
- (2)Swap the Surr output and Side Surr output at the rear pannel for CMI9880.

Ver 0.40

- (1)Add one page(Desktop Configuration 3) for designing 8 UAJ Jacks(6 jacks at real panel + 2 jacks at front panel) of ALC880

Ver 0.41

- (1)Modify CMI-9880 SenseA/SenseB/ JDREF pins application circuit (add the filter circuit to eliminate noise for proper jack detection function)
- (2)Modify the SPDIF_IN circuit(add 75 Ohm resistor for more SPDIF devices compatible)
- (3)Modify 1-3 Page (Mobile configuration) circuit(Codec 40pin:JDREF ;20K,1% resistor)
- (4)Modify ALC880/260 Stand-by Mode circuit

Ver 0.42

- (1)Add ALC882/880 Co-lay circuit
- (2)Add one page circuit(only ALC882 circuit)
- (3)Modify 1-4 page; GPIO_VREFO Control circuit

Ver 0.43

- (1)Add ALC883 Co-lay circuit
- (2)Modify ALC882 circuit(SPDIF_IN circuit,10k-->12k)
- (3)Modify 1-4 page(8 UAJ phonejacks); GPIO_VREFO Control circuit
- (4)Modify ALC880/260/882/883 Stand-by/de-pop Circuit

Ver 0.44

- (1)Add ALC262 Co-lay circuit

Ver 0.45

- (1)Add ALC861 Co-lay circuit for desktop configuration

Ver 0.46


- (1)Modify the S/PDIF DC Bias circuit

Ver 0.47

- (1)Modify some pages about the mistake of S/PDIF_OUT divided resistor circuit

Realtek Semiconductor, Crop.			
Title			
ALC880/882/260/883/262/CMi9880			
Size	Document Number		
Revision History			
Date:	Tuesday, August 16, 2005	Sheet	1 of 7
			Rev 0.47

7.1 Speaker Configuration for ALC880/882/883

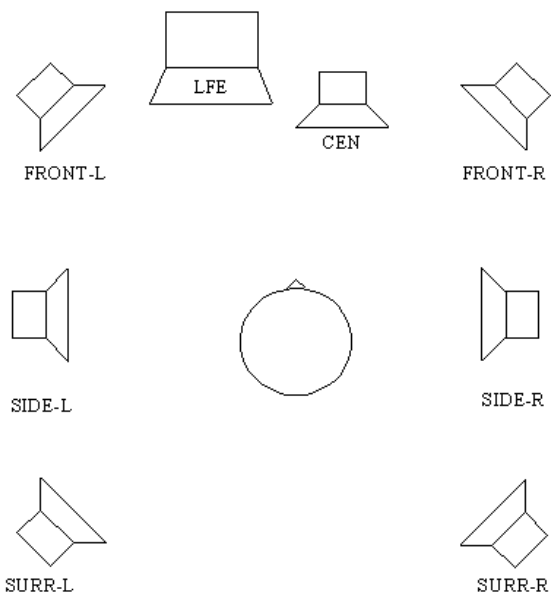

Desktop Configuration 1

	PORT-A	PORT-B	PORT-C	PORT-D	PORT-E	PORT-F	PORT-G	PORT-H
Function	SURR	MIC-IN	LINE-IN	FRONT	LINE2	MIC2	CEN/LFE	SIDE
Location	Rear	Rear	Rear	Rear	Front	Front	Rear	Rear


Desktop Configuration 2

	PORT-A	PORT-B	PORT-C	PORT-D	PORT-E	PORT-F	PORT-G	PORT-H
Function	UAJ	UAJ	UAJ	UAJ	UAJ	UAJ	Vrefout	Vrefout
Location	Front	Rear	Rear	Rear	Front	Front	Rear	Rear

Desktop Configuration 3

	PORT-A	PORT-B	PORT-C	PORT-D	PORT-E	PORT-F	PORT-G	PORT-H
Function	UAJ	UAJ	UAJ	UAJ	UAJ	UAJ	UAJ(GPIO0)	UAJ(GPIO1)
Location	Rear	Rear	Rear	Rear	Front	Front	Rear	Rear

7.1 Speaker Configuration for CMI9880

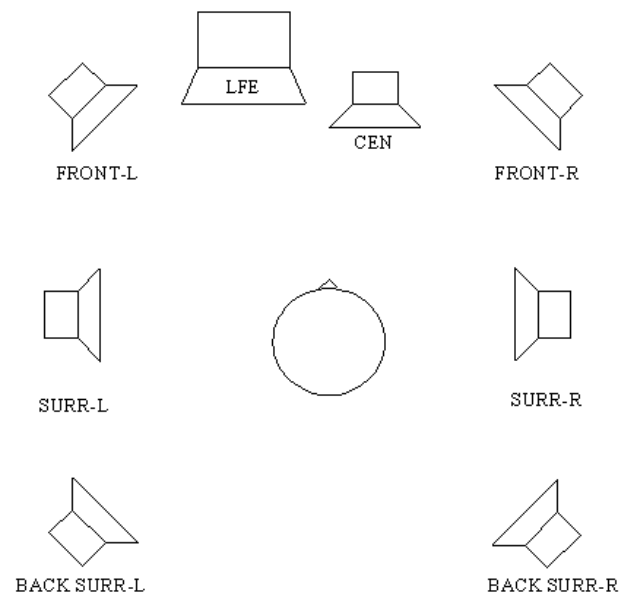

Desktop Configuration 1

	PORT-A	PORT-B	PORT-C	PORT-D	PORT-E	PORT-F	PORT-G	PORT-H
Function	BACK-SUR	MIC-IN	LINE-IN	FRONT	LINE2	MIC2	CEN/LFE	SURR
Location	Rear	Rear	Rear	Rear	Front	Front	Rear	Rear


Desktop Configuration 2




	PORT-A	PORT-B	PORT-C	PORT-D	PORT-E	PORT-F	PORT-G	PORT-H
Function	UAJ	UAJ	UAJ	UAJ	UAJ	UAJ	Vrefout	Vrefout
Location	Front	Rear	Rear	Rear	Front	Front	Rear	Rear

Realtek Semiconductor, Corp.

Title		ALC880/882/883/260/262/CMI9880	
Size	Document Number	Rev 0.47	
Date: Tuesday, August 16, 2005		Sheet 2 of 7	


Speaker Configuration

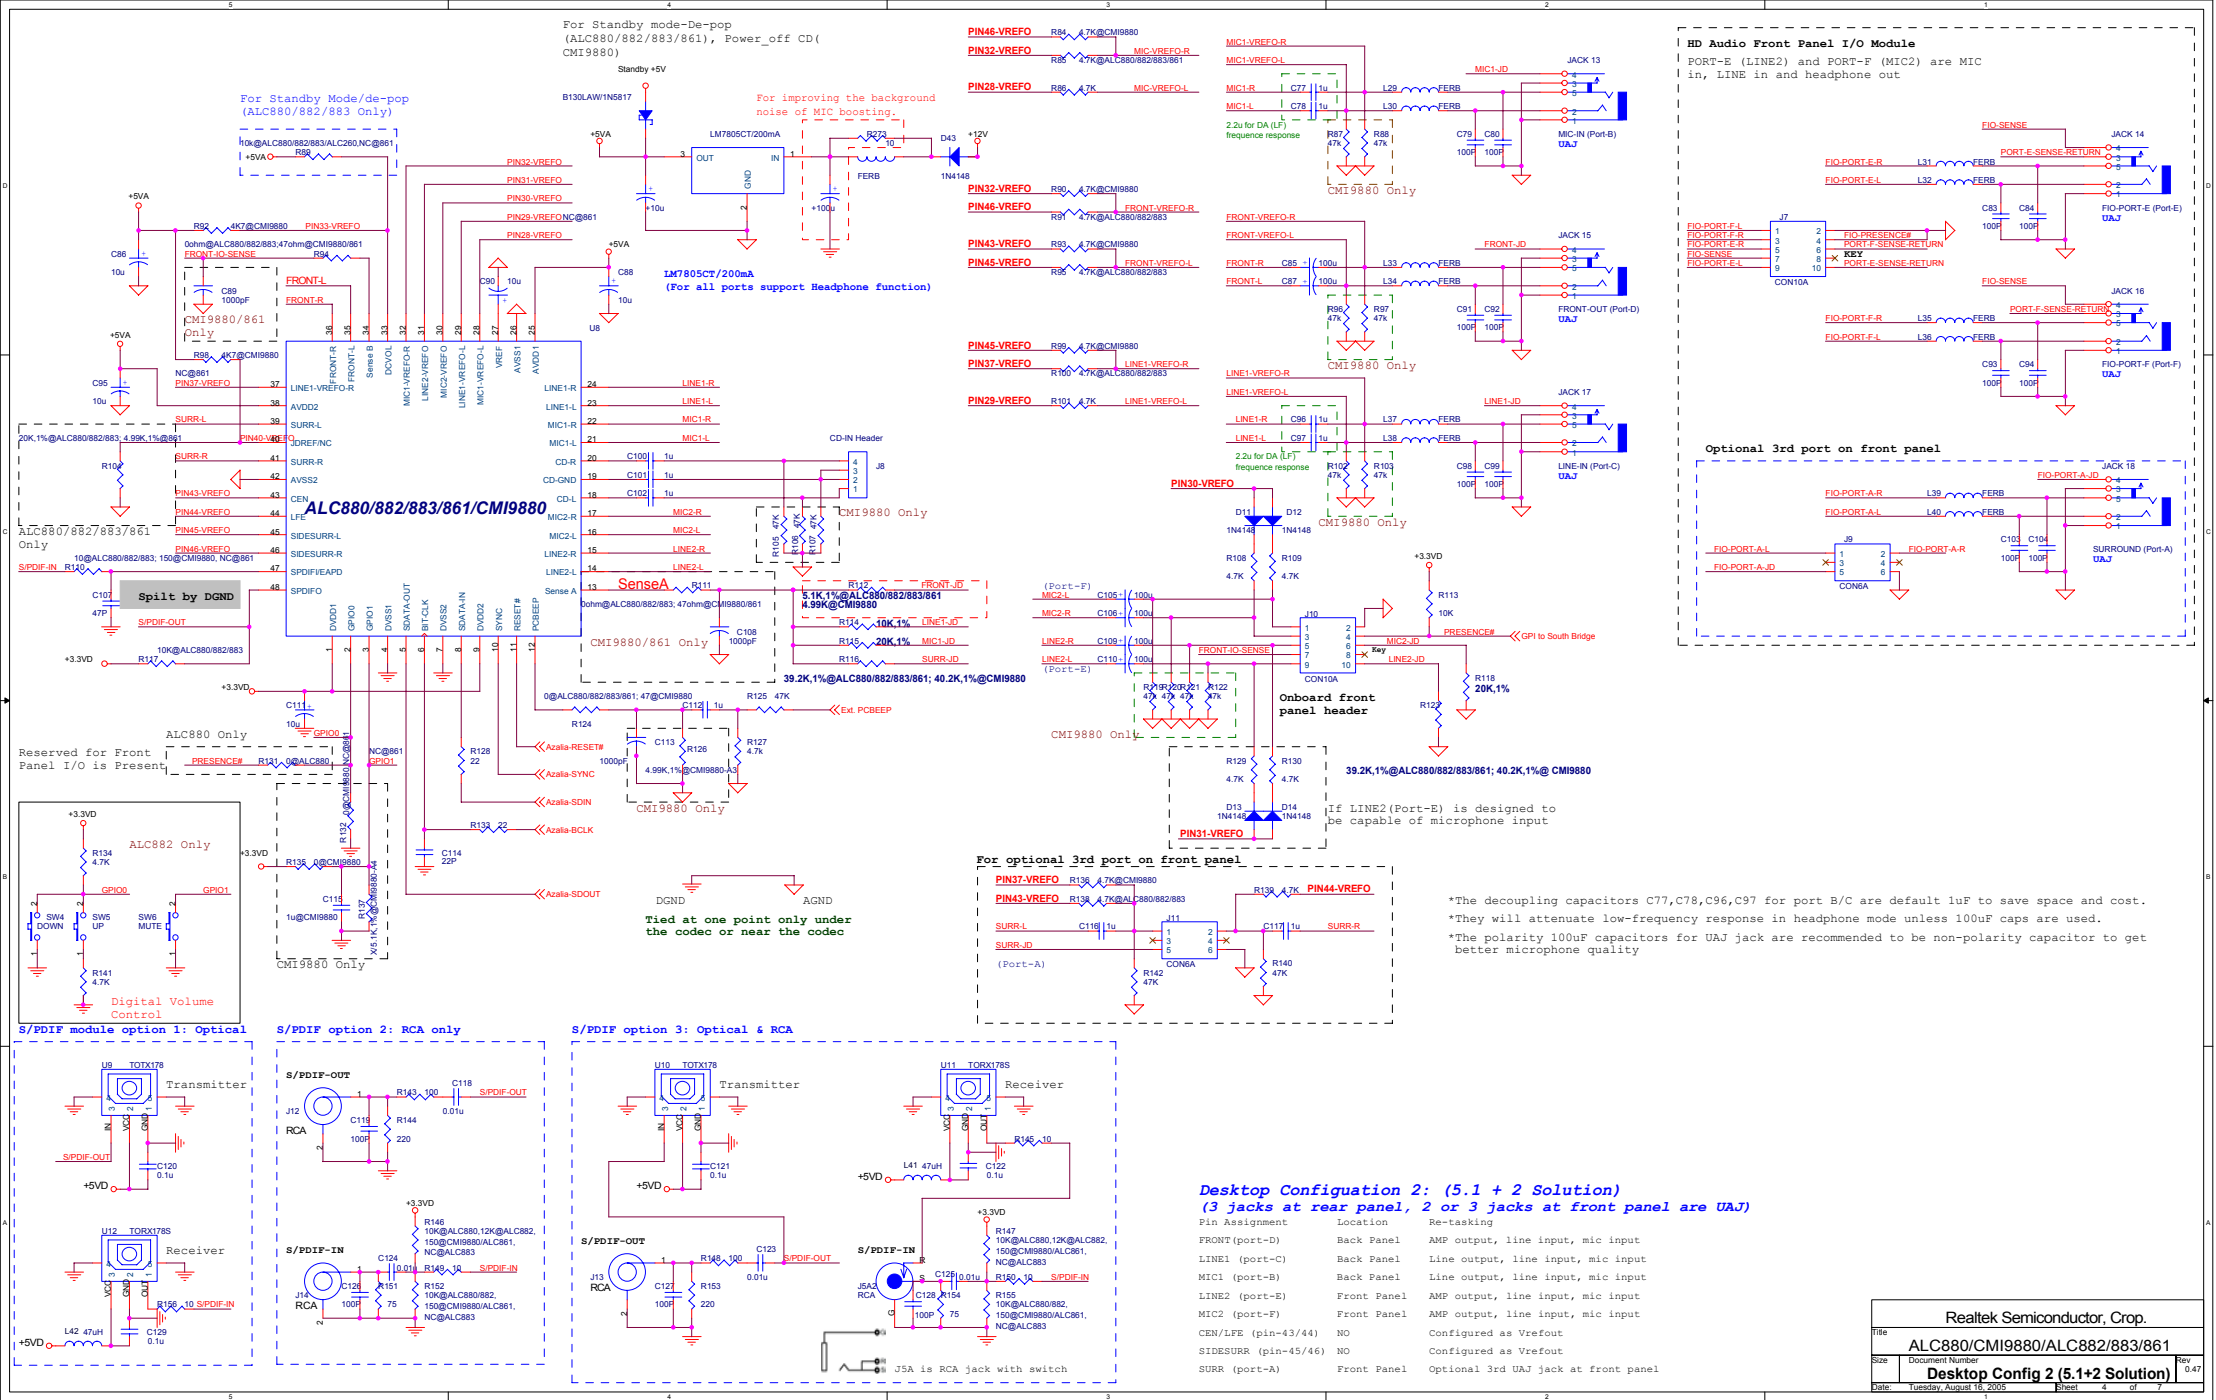

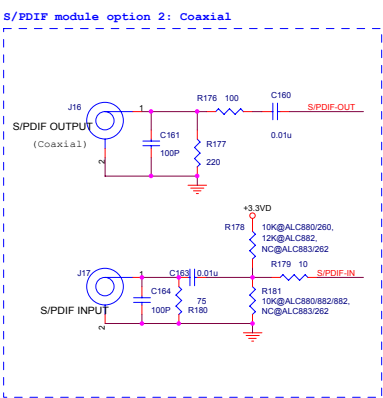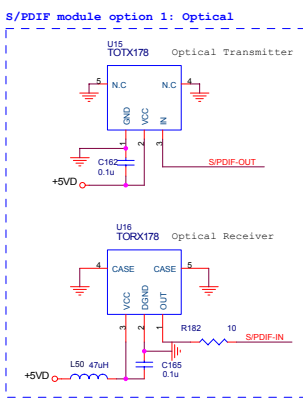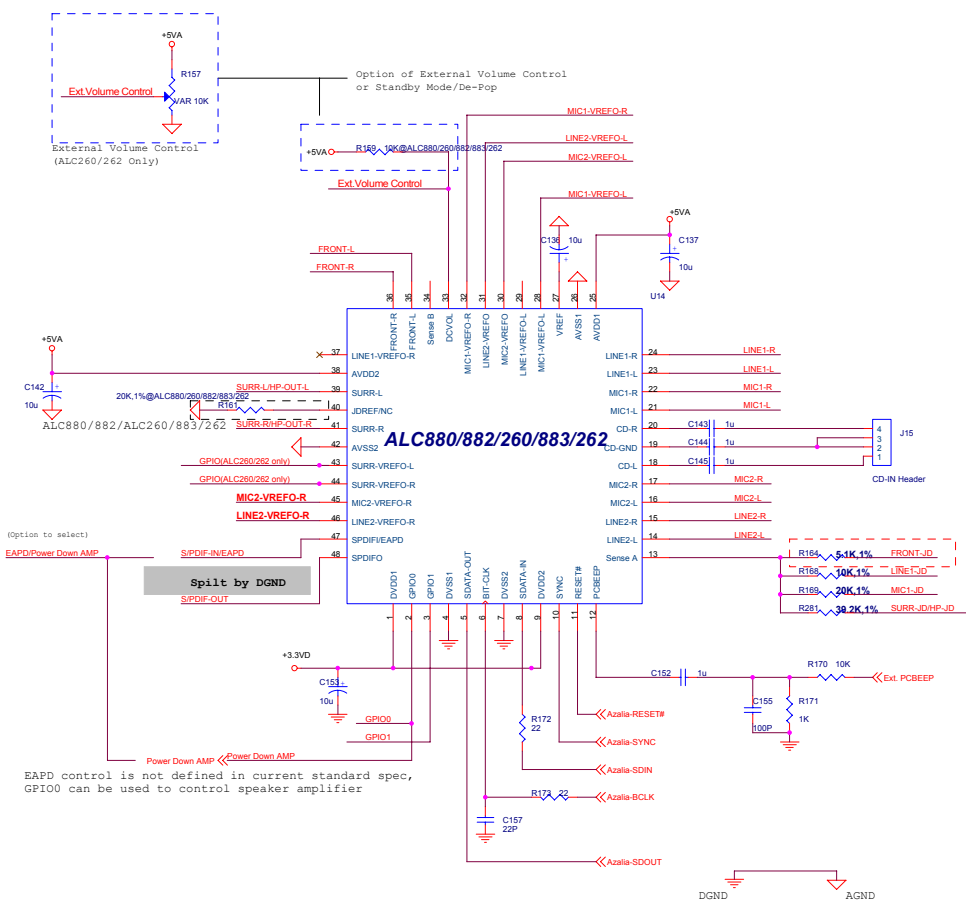


Mobile Configuration:
(3 external jacks, 2 or 4 internal Mic, 1 stereo output to Speaker Amp.)

Pin Assignment	Location	Re-tasking
FRONT (pin-35/36)	Jack 1	AMP output, line input
SURR (pin-39/41)	to 2W AMP	X
CEN/LFE (pin-43/44)	X	SURR-VREF0-L/R (Not used in this case)
SIDESURR (pin-45/46)	X	SIDESURR-L is MIC2-VREF0-R, SIDESURR-R is LINE2-VREF0-R
LINE1 (pin-23/24)	Jack 2	Line input, line output
MIC1 (pin-21/22)	Jack 3	Mic input, line-out
LINE2 (pin-14/15)	Int. MIK1/MIK2	Mic inputs
MIC2 (pin-16/17)	Int. MIK3/MIK4	Mic inputs

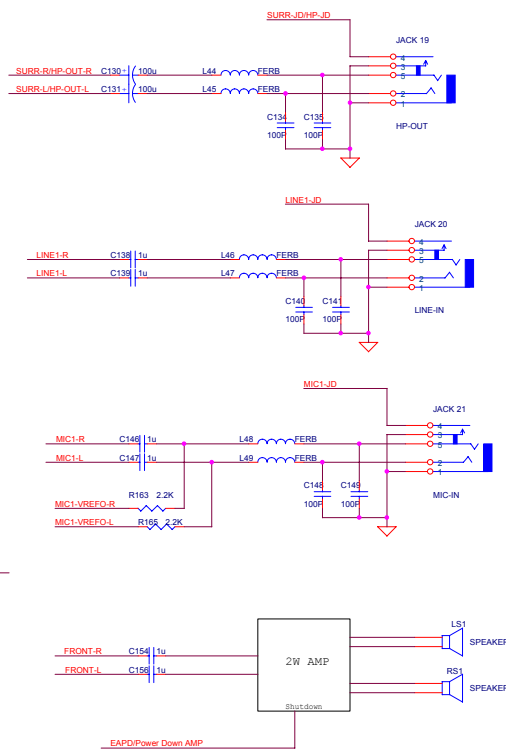

For Standby mode-De-pop
(ALC880/882/883/861)
Standby +5V

 External Volume Control
(ALC260 Only)



Option of External Volume Control
or Standby Mode/De-Pop

For Standby Mode/de-pop
(ALC880/260/882/883 Only)



Ext Volume Control



Ext Volume Control



Ext Volume Control



Ext Volume Control



 
Ext Volume Control



Ext Volume Control




Ext Volume Control




Ext Volume Control



 
Ext Volume Control




Ext Volume Control

 

Ext Volume Control

 


Ext Volume Control

 

Ext Volume Control



 Ext Volume Control



Ext Volume Control



Ext Volume Control



Ext Volume Control



Ext Volume Control



Ext Volume Control





Ext Volume Control



Ext Volume Control



Ext Volume Control

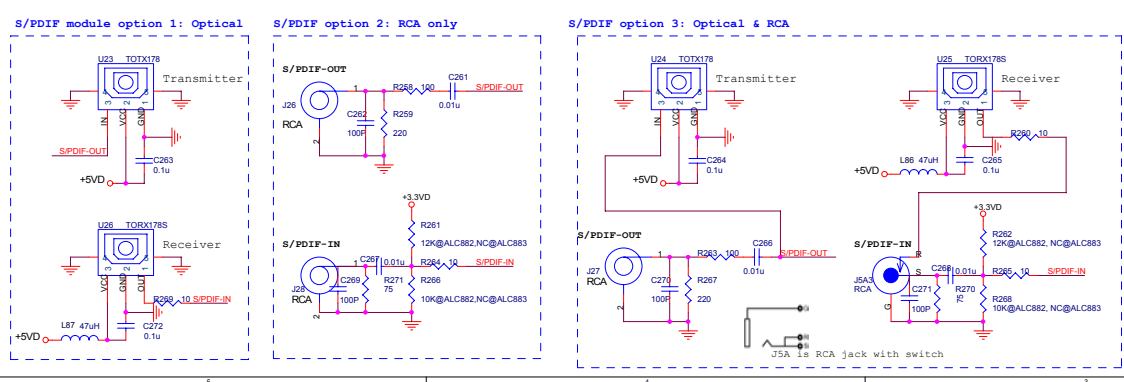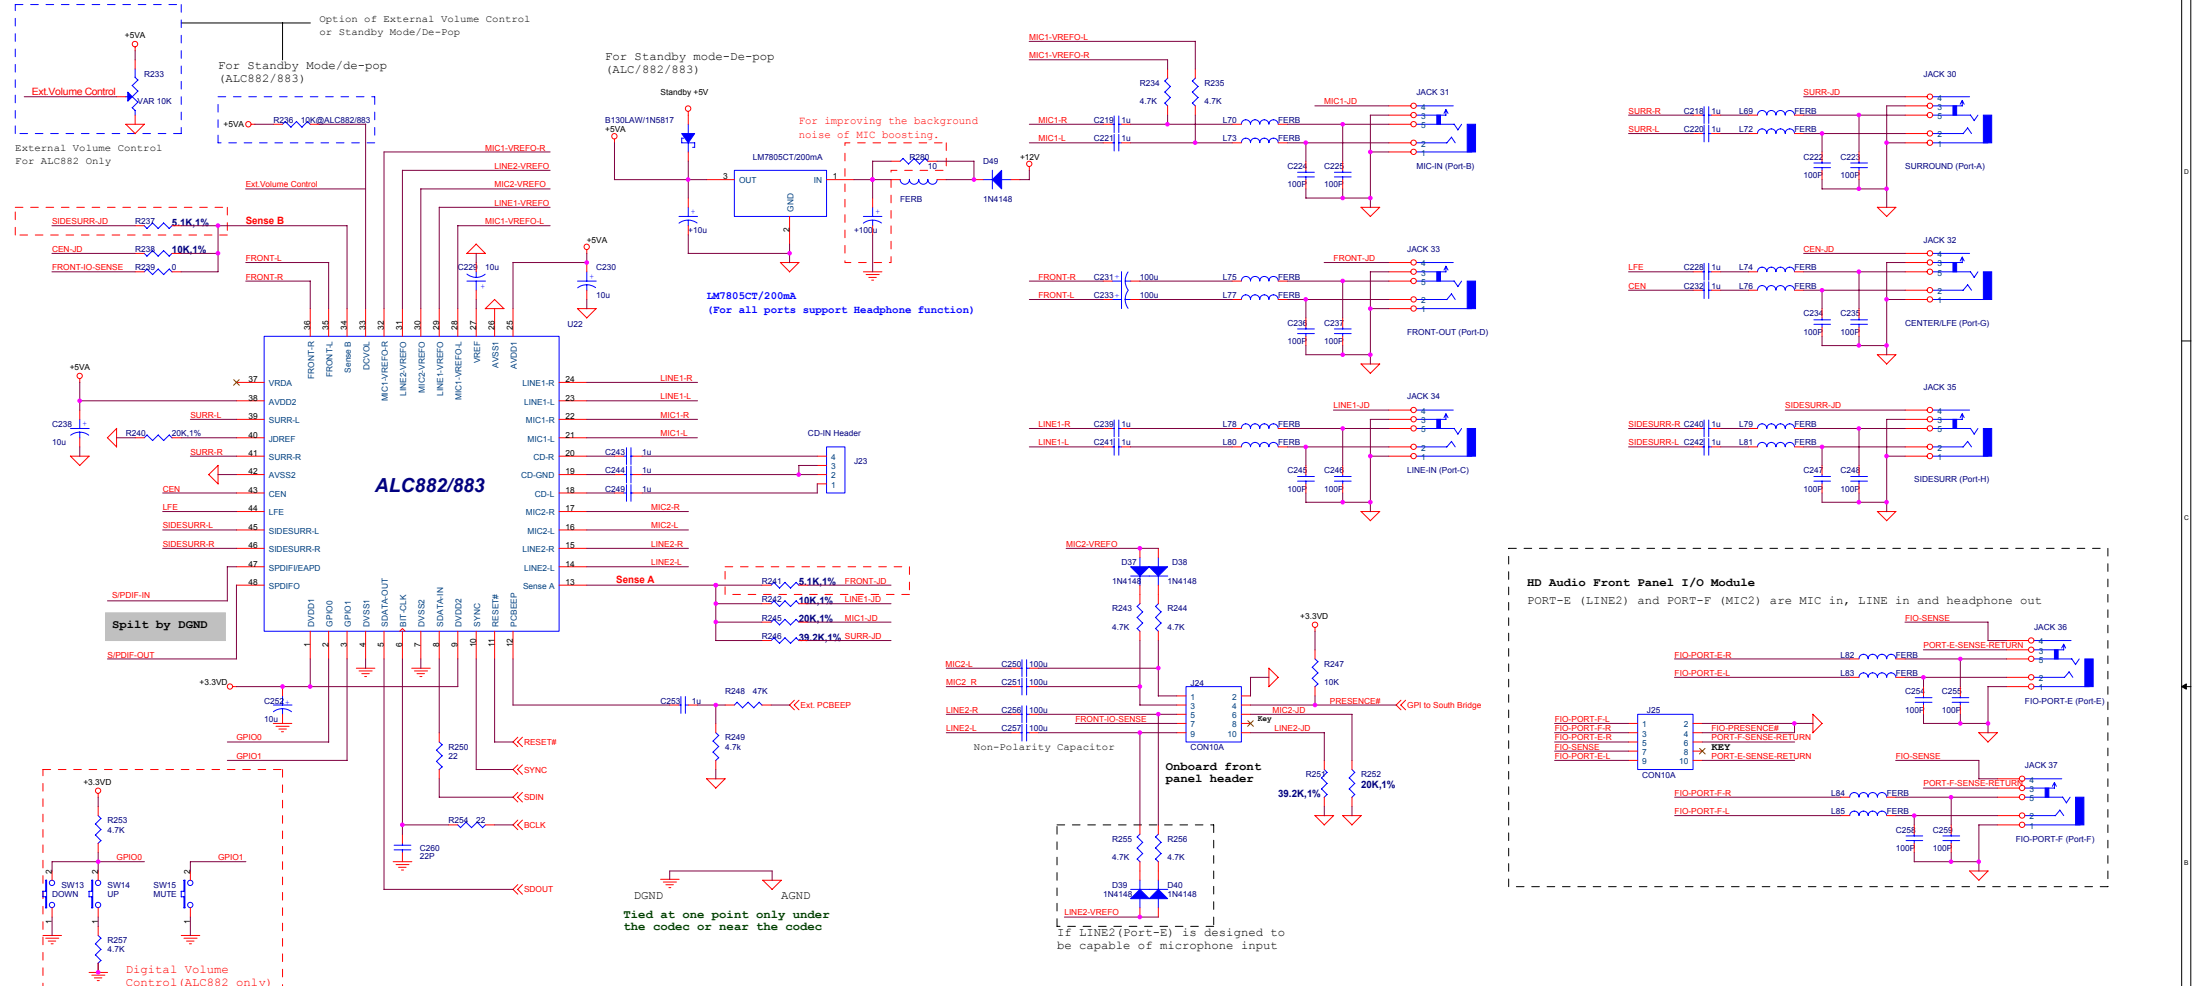

Desktop Configuration for pure ALC882/883: (7.1 Channel Solution)
Rear Panel: 6 jacks have specific functionality
Front Panel: 2 jacks are Universal Audio Jack

Pin Assignment	Location	Function
FRONT (pin-35/36)	Back Panel	Front line out w/ amplifier
SURR (pin-39/41)	Back Panel	Surround line out
CEN/LFE (pin-43/44)	Back Panel	Center/Life line out
SIDESURR (pin-45/46)	Back Panel	Side surround line out
LINE1 (pin-23/24)	Back Panel	Line in / Shared surround out
MIC1 (pin-21/22)	Back Panel	Mic in / Shared Center-Life out
LINE2 (pin-14/15)	Front Panel	Headphone out / line in / mic in
MIC2 (pin-16/17)	Front Panel	Mic in / Headphone out / line in