


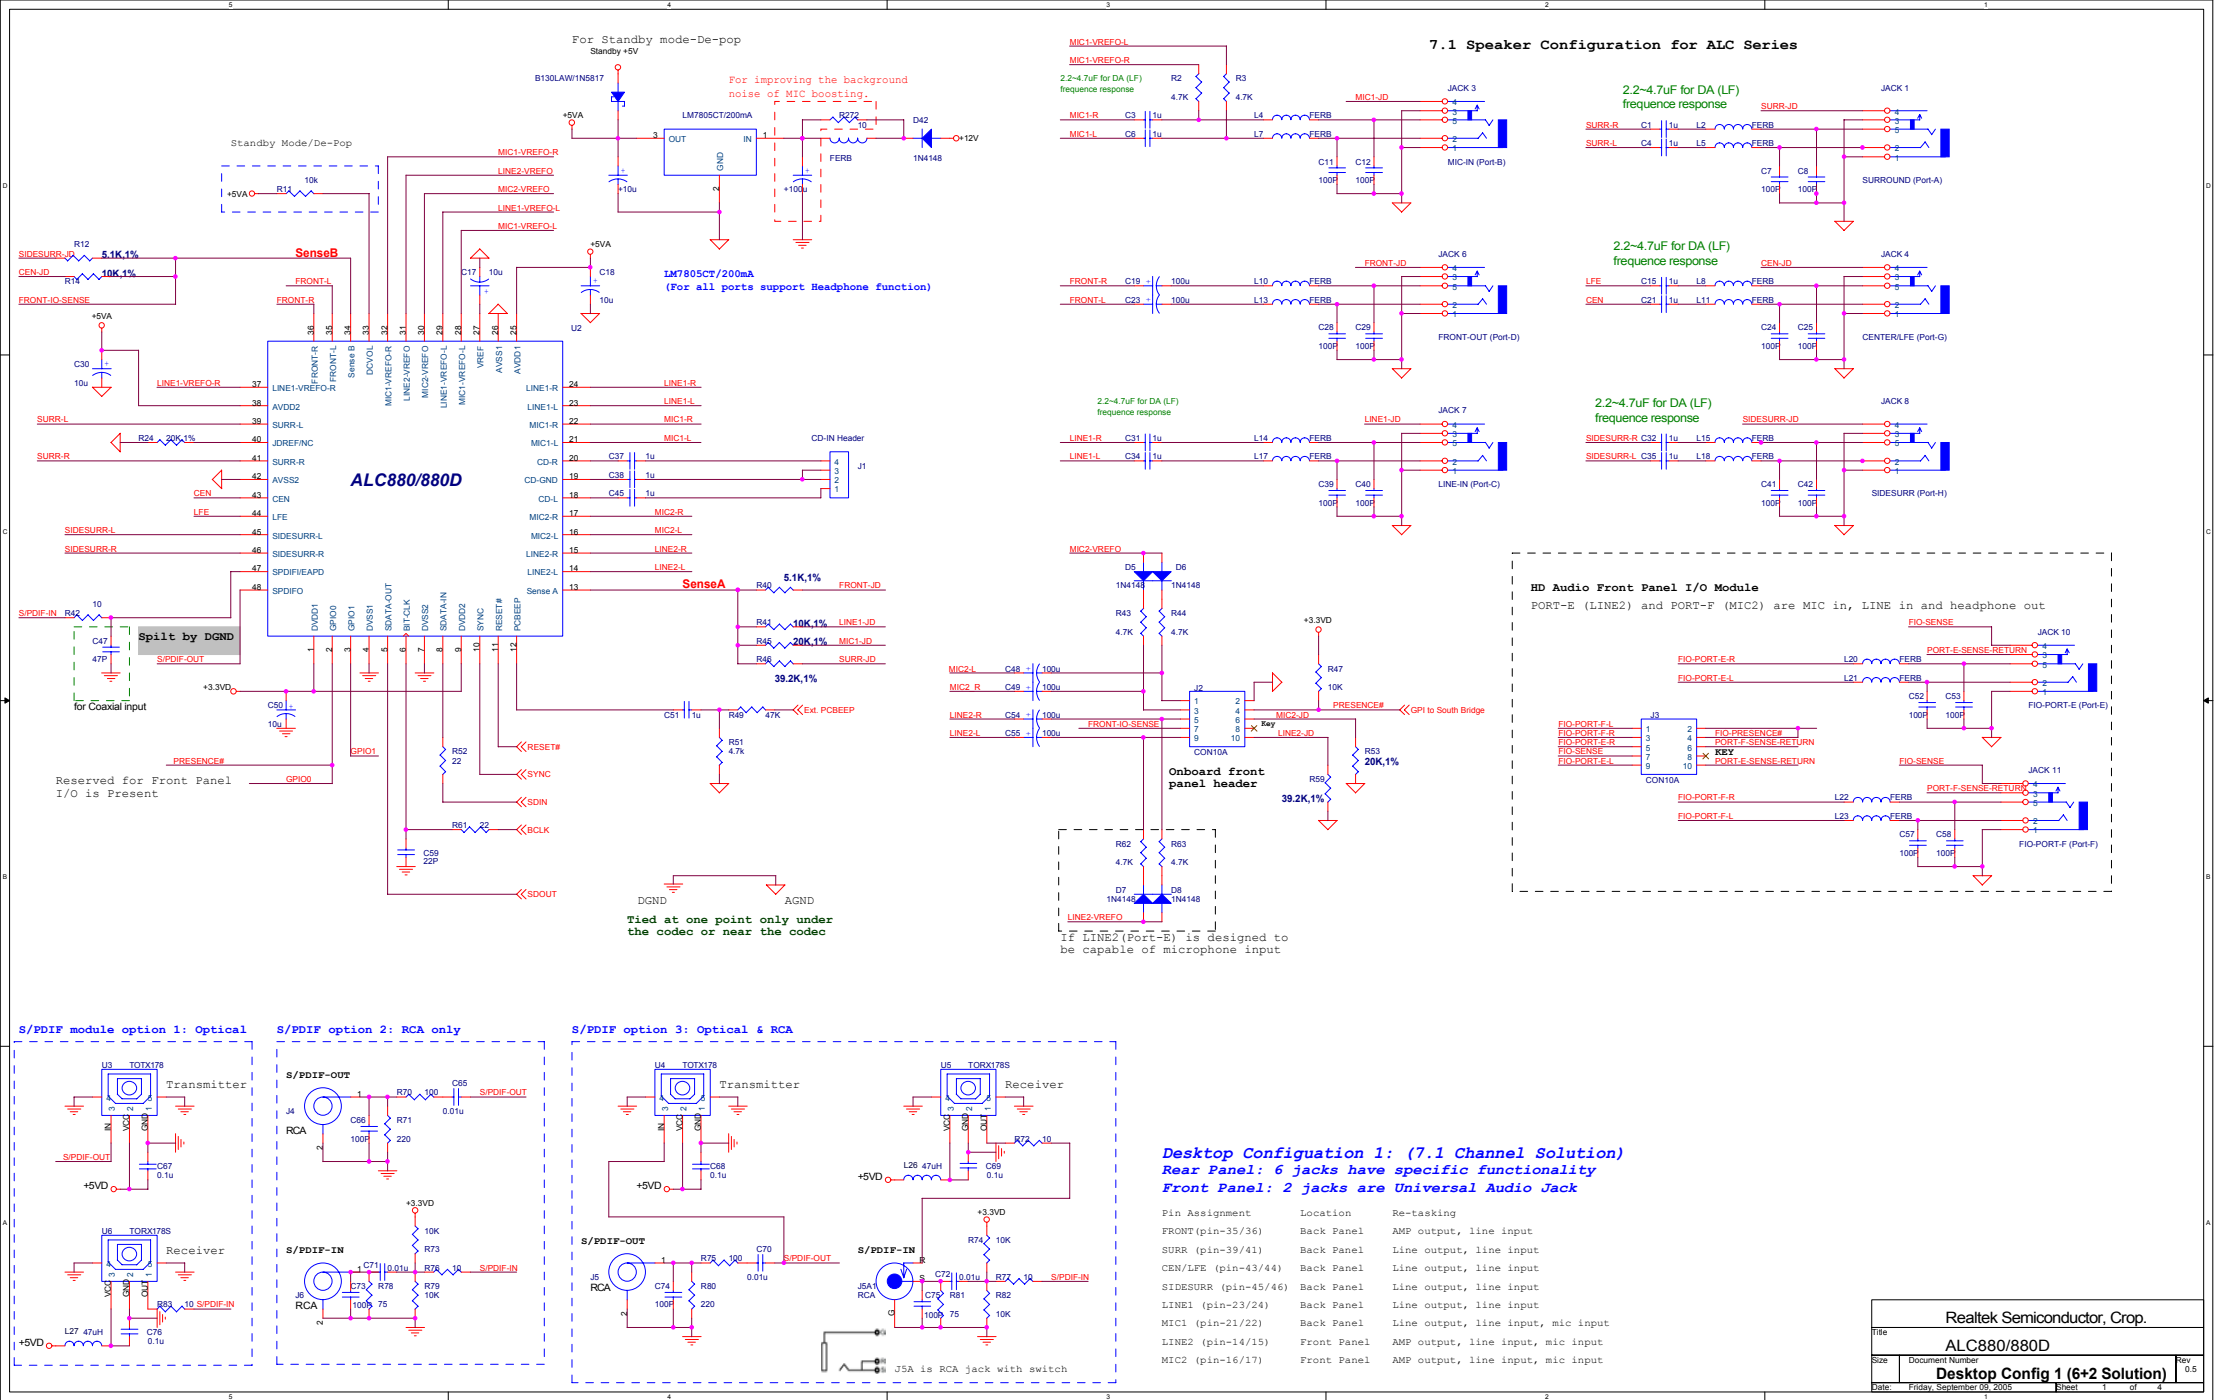
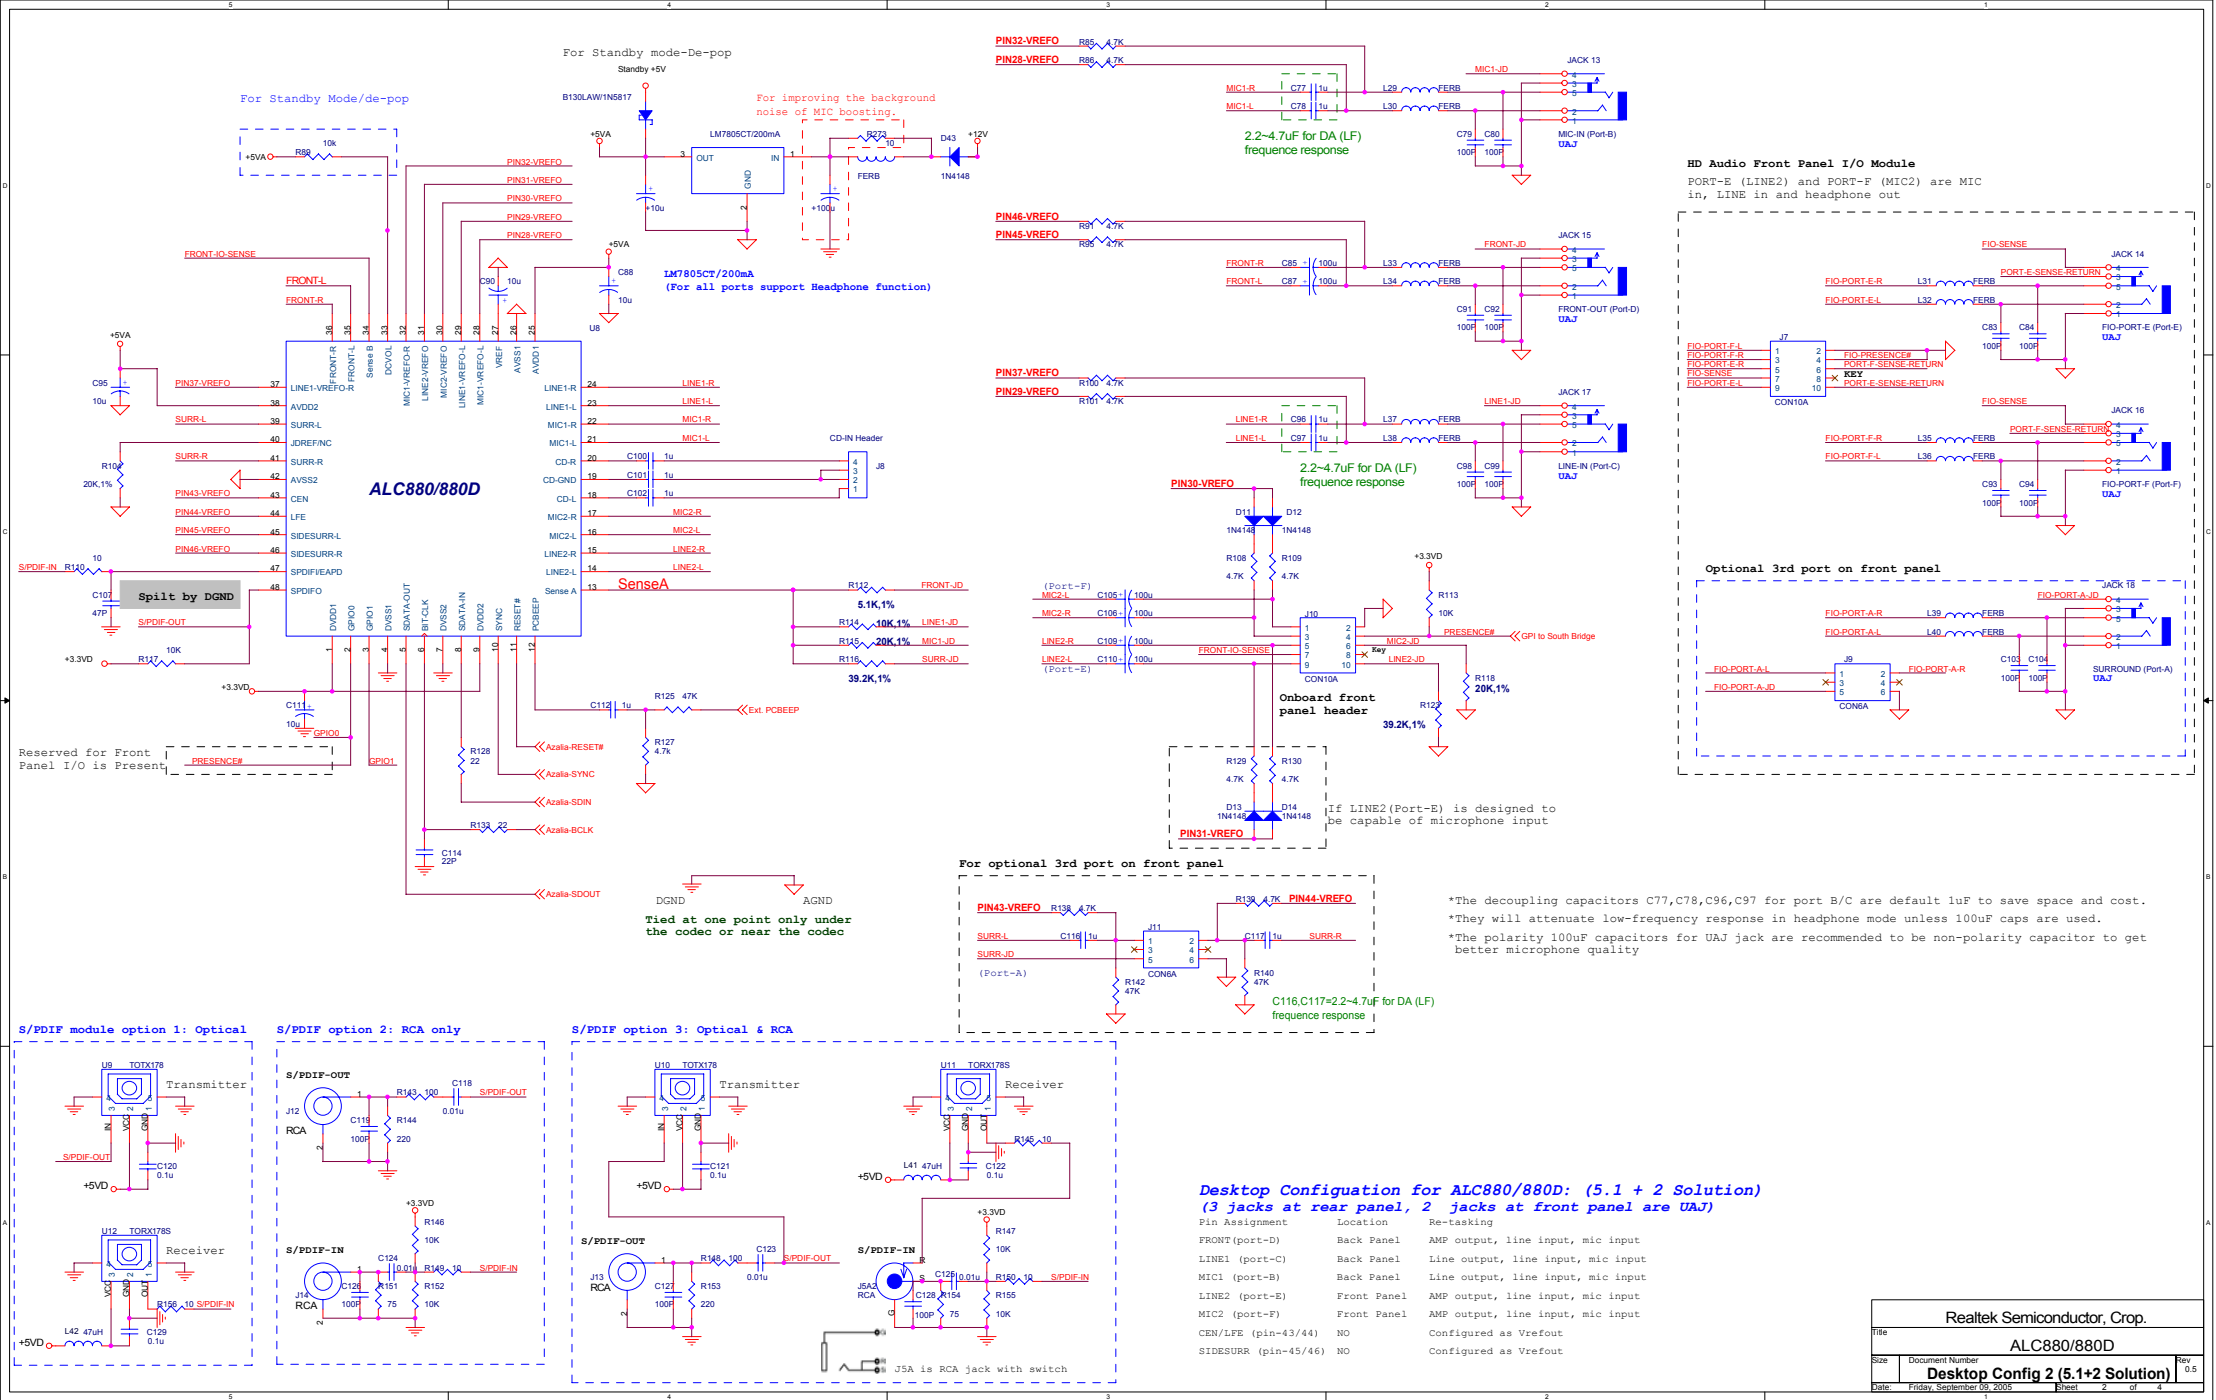
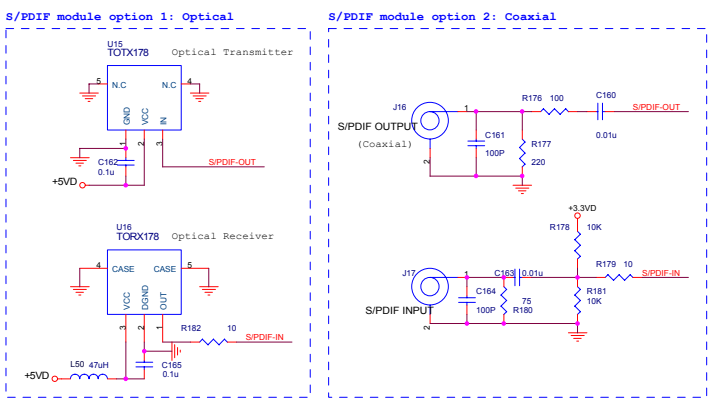
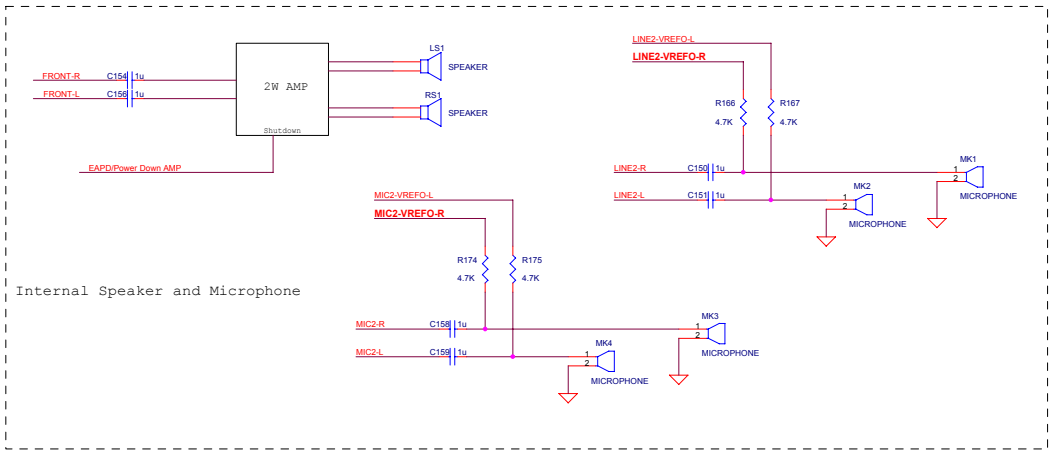


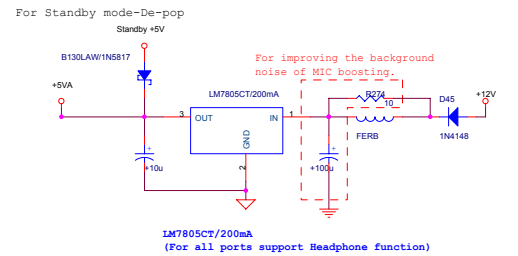

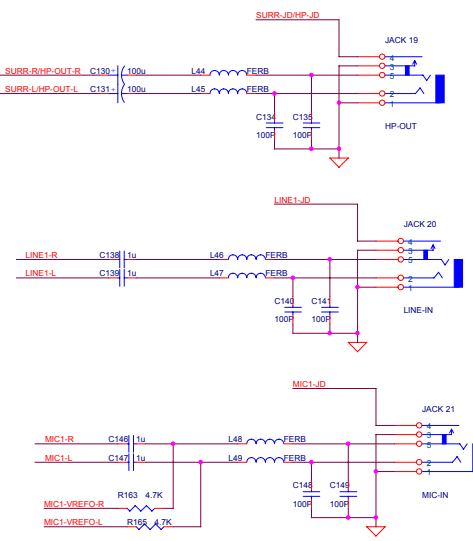

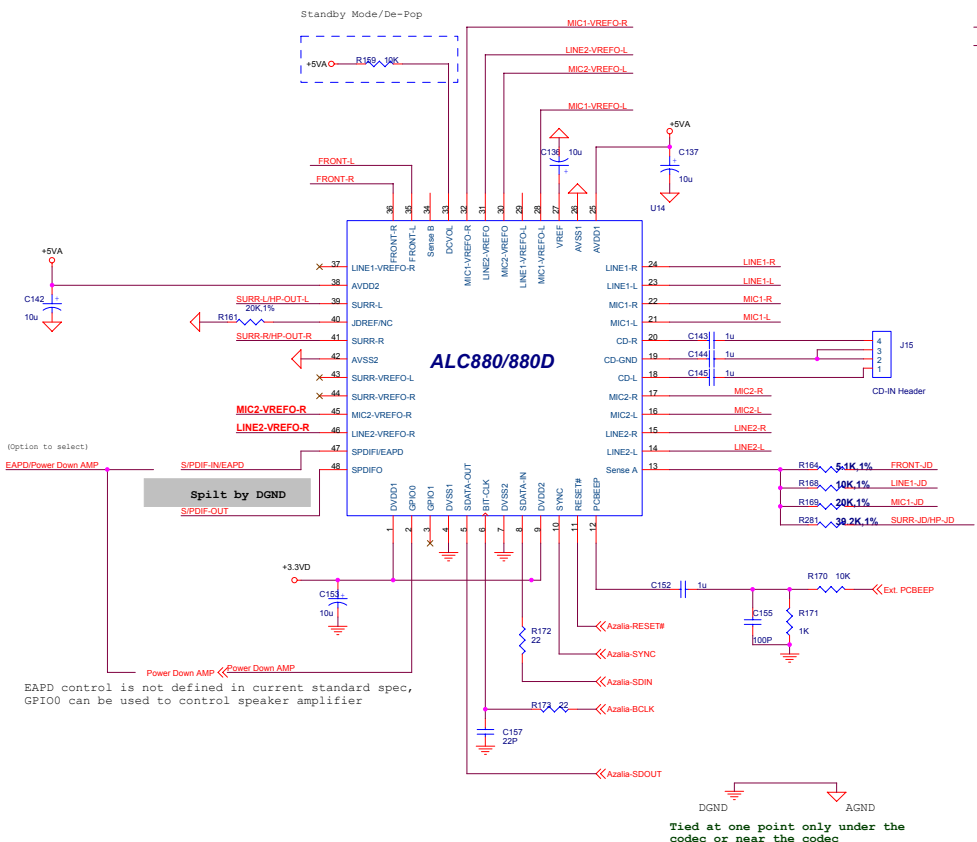

Mobile Configuration for ALC880/880D

(3 external jacks, 2 or 4 internal Mic, 1 stereo output to Speaker Amp.)

Pin Assignment	Location	Re-tasking
FRONT (pin-35/36)	2W Amp	X
SURR (pin-39/41)	Jack 1	AMP output, line input
CEN/LFE (pin-43/44)	X	SURR-VREF0-L/R (Not used in this case)
SIDESURR (pin-45/46)	X	SIDESURR-L is MIC2-VREF0-R, SIDESURR-R is LINE2-VREF0-R
LINE1 (pin-23/24)	Jack 2	Line input, line output
MIC1 (pin-21/22)	Jack 3	Mic input, line-out
LINE2 (pin-14/15)	Int. MIK1/MIK2	Mic inputs
MIC2 (pin-16/17)	Int. MIK3/MIK4	Mic inputs

